USER MANUAL

TEAM

01 **2013 Mechanism**

02 **KT Mechanism**

03 **CT100 Mechanism**

04 **MC Mechanism**

USER MANUAL

TEAM

2013 MECHANISM

01 Seat Height Adjustment

02 Seat Depth Adjustment

03 Tilt Tension

04 Tilt Limiter

05 Armrest Height Adjustment

06 Backrest Height Adjustment

07 Headrest Height Adjustment

08 Headrest Angle Adjustment

bristol


01

Seat Height Adjustment

Lever under right side of seat

To raise:
Take your weight off the seat, lift lever up.
To lower:
Remain seated, lift lever up.

Allows you to adjust the height of the seat, for good support and blood circulation in the legs.

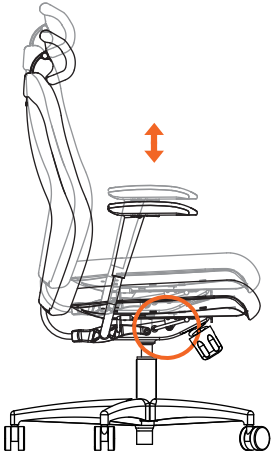

02


Seat Depth Adjustment

Lever under left side of seat

To move forward / backward

Press lever and adjust seat either forward or backward. Release lever to lock in position.

Allows you to adjust the depth of the seat, for good support and blood circulation in the legs.

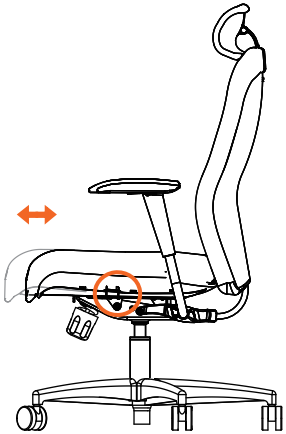


03

Tilt Tension

Knob below front side of seat

To increase:
Turn knob clockwise.
To decrease:
Turn knob counterclockwise

Set the resistance when leaning back to support and balance your weight in any position.

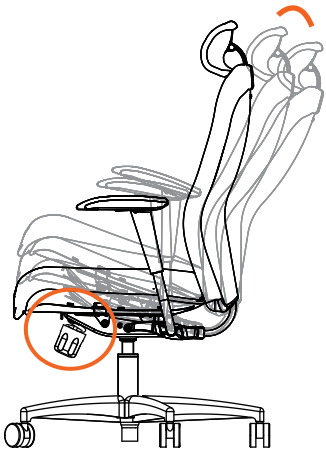


04

Tilt Limiter

Lever under right side of seat

To engage:
Push the lever in to lock the tilting mechanism.
To release:
Pull out the lever to unlock the tilting mechanism.

Allows you to sit in an upright locked position.

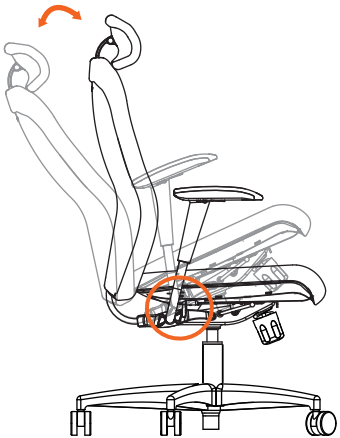

05


Armrest Adjustment

Lever under armrest pad

To raise or lower:


Press lever to unlock arm, adjust arm, release lever to lock.

Adjust chair's arm height to support your arms and take weight off your shoulders.

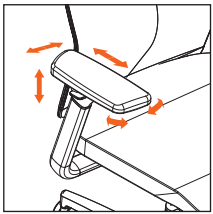


Saya Soul Armrest

- Armrest up-or-down, forward-backward, sideway adjustment and angle adjustment

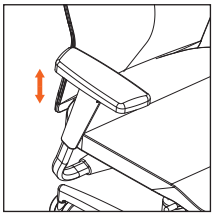

Presa Soul Armrest

- Armrest up-or-down adjustment

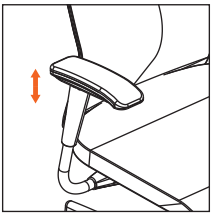

Saya Armrest

- Armrest up-or-down adjustment

06

Backrest Height Adjustment

Bottom corners of backrest


To raise:

Grasp and lift up the bottom portion of the backrest and release to desired height.

To lower:

Grasp and lift up the backrest to its maximum height and release back to its lowest postition.;

Allows you to adjust the height of the backrest ,for good support and blood circulation of the back.

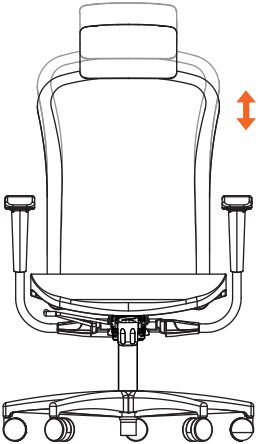


07

Headrest Height Adjustment

Rear of the headrest

To raise or lower headrest:
Grasp the rear of headrest and slide it up or down to desired height.

Adjust headrest's height to support your head and neck when leaning back.

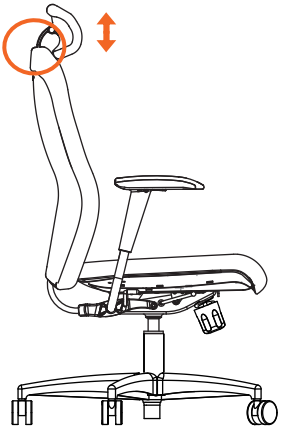

08

Headrest Angle Adjustment

Side edges of headrest

To pivot headrest:

Grasp side edges of headrest and pivot the angle to desired position.

Adjust headrest's angle to support your head and neck when leaning back.



USER MANUAL

TEAM

KT MECHANISM

01 **Seat Height Adjustment**

02 **Seat Depth Adjustment**

03 **Tilt Tension**

04 **Tilt Limiter**

05 **Armrest Height Adjustment**

06 **Backrest Height Adjustment**

07 **Headrest Height Adjustment**

08 **Headrest Angle Adjustment**

bristol


01

Seat Height Adjustment

Lever under right side of seat

To raise:
Take your weight off the seat, lift lever up.
To lower:
Remain seated, lift lever up.

Allows you to adjust the height of the seat, for good support and blood circulation in the legs.

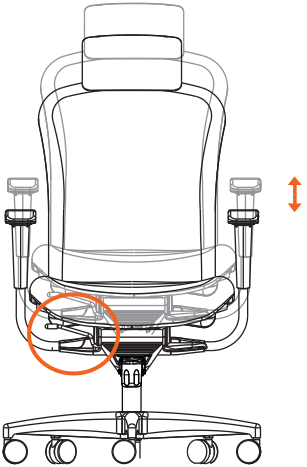

02


Seat Depth Adjustment

Lever under left side of seat

To move forward / backward

Press lever and adjust seat either forward or backward. Release lever to lock in position.

Allows you to adjust the depth of the seat, for good support and blood circulation in the legs.

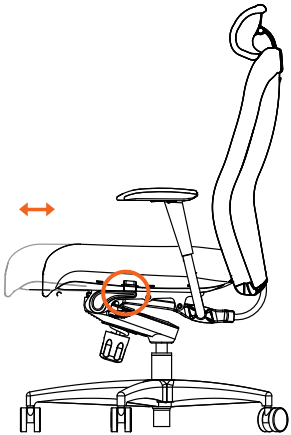


03

Tilt Tension

Knob below front side of seat

To increase:
Turn knob clockwise.
To decrease:
Turn knob counterclockwise.

Set the resistance when leaning back to support and balance your weight in any position.

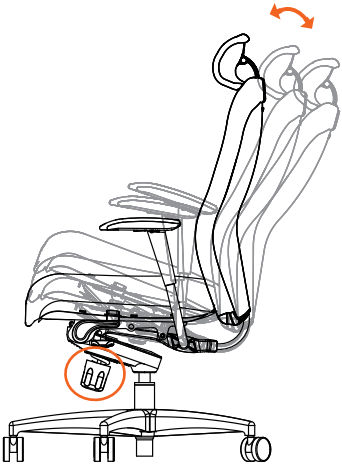


04

Tilt Limiter

Lever under left side of seat

To engage:
Recline and twist lever counter-clockwise to lock the tilting mechanism.
To disengage:
Twist lever clockwise and lean backward slightly to unlock the tilting mechanism.

Allows you to sit in an upright position or partially reclined locked position.

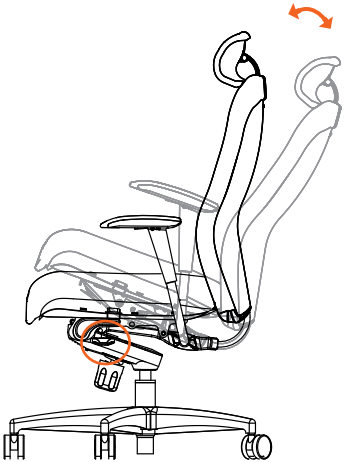


05

Armrest Adjustment

Lever under armrest pad


To raise or lower:
Press lever to unlock arm,
adjust arm, release lever to lock.

Adjust chair's arm height to support your arms and take weight off your shoulders.

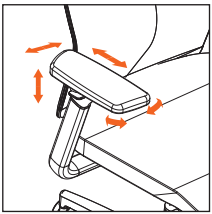


Saya Soul Armrest

- Armrest up-or-down, forward-backward, sideway adjustment and angle adjustment

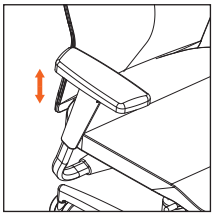

Presa Soul Armrest

- Armrest up-or-down adjustment

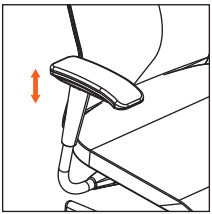

Saya Armrest

- Armrest up-or-down adjustment

06


Backrest Height Adjustment

Bottom corners of backrest

To raise:
Grasp and lift up the bottom portion of the backrest and release to desired height.

To lower:
Grasp and lift up the backrest to its maximum height and release back to its lowest postition.

Allows you to adjust the height of the backrest, for good support and blood circulation of the back.

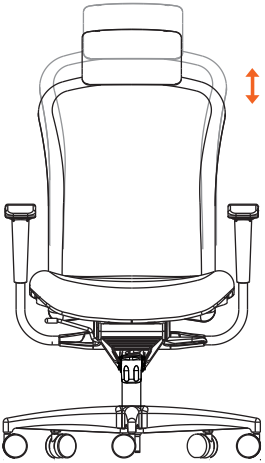

07

Headrest Height Adjustment

Rear of the headrest

To raise or lower headrest:
Grasp the rear of headrest and slide it up or down to desired height.

Adjust headrest's height to support your head and neck when leaning back.



08


Headrest Angle Adjustment

Side edges of headrest

To pivot headrest:

Grasp side edges of headrest and pivot the angle to desired position.

Adjust headrest's angle to support your head and neck when leaning back.

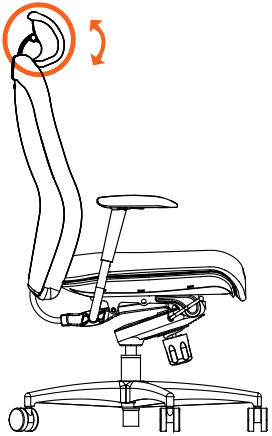

USER MANUAL

TEAM

CT100 MECHANISM

01 **Seat Height Adjustment**

02 **Tilt Tension**

03 **Tilt Limiter**

04 **Armrest Height Adjustment**

05 **Backrest Height Adjustment**

06 **Headrest Height Adjustment**

07 **Headrest Angle Adjustment**

bristol


01

Seat Height Adjustment

Lever under right side of seat

To raise:
Take your weight off the seat,
tilt the lever handle forward down.
To lower:
Remain seated, tilt the lever handle
forward down again.

Allows you to adjust the height of the seat, for good support and blood circulation in the legs.

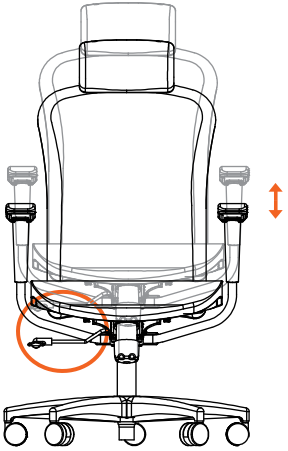


02

Tilt Tension

Knob below front side of seat

To increase:
Turn knob clockwise.
To decrease:
Turn knob counterclockwise

Set the resistance when leaning back to support and balance your weight in any position.

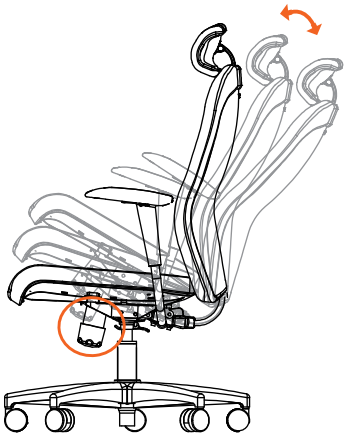


03

Tilt Limiter

Lever under right side of seat

To engage:
Push the lever in to lock the tilting mechanism.
To release:
Pull out the lever to unlock the tilting mechanism.

Allows you to sit in an upright locked position.

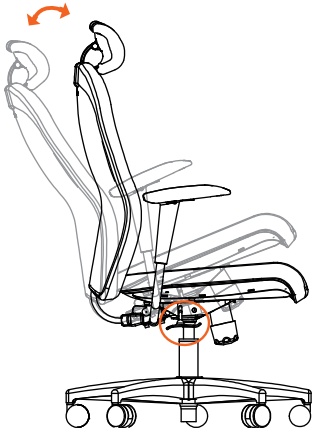


04

Armrest Adjustment

Lever under armrest pad


To raise or lower:
Press lever to unlock arm,
adjust arm, release lever to lock.

Adjust chair's arm height to support your arms and take weight off your shoulders.

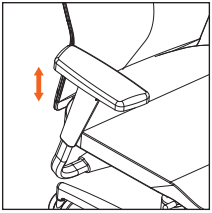

Presa Soul Armrest

- Armrest up-or-down adjustment

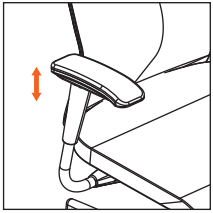

Saya Armrest

- Armrest up-or-down adjustment

05


Backrest height adjustment

Bottom corners of backrest

To raise:
Grasp and lift up the bottom portion of the backrest and release to desired height.

To lower:
Grasp and lift up the backrest to its maximum height and release back to its lowest position.

Allows you to adjust height of the backrest, for good support and blood circulation of the back.

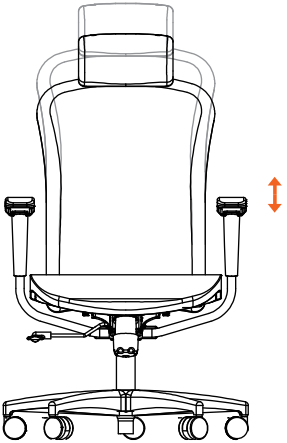

06

Headrest Height Adjustment

Rear of the headrest

To raise or lower headrest:
Grasp the rear of the headrest and slide it up or down to desired height.

Adjust headrest's height to support your head and neck when leaning back.



07

Headrest Angle Adjustment

Side edges of headrest

To pivot headrest:

Grasp side edges of headrest and pivot the angle to desired position.

Adjust headrest's angle to support your head and neck when leaning back.



USER MANUAL

TEAM

MC MECHANISM

01 **Seat Height Adjustment**

02 **Seat Depth Adjustment**

03 **Tilt Tension**

04 **Tilt Limiter**

05 **Armrest Height Adjustment**

06 **Backrest Height Adjustment**

07 **Headrest Height Adjustment**

08 **Headrest Angle Adjustment**

bristol


01

Seat Height Adjustment

Lever under right side of seat

To raise:
Take your weight off the seat, lift lever up.
To lower:
Remain seated, lift lever up.

Allows you to adjust the height of the seat, for good support and blood circulation in the legs.

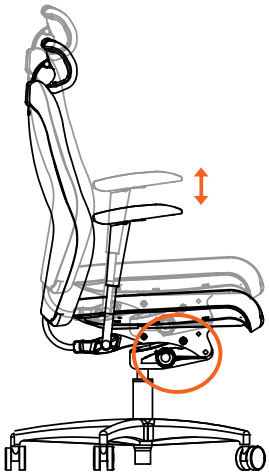

02


Seat Depth Adjustment

Lever under left side of seat

To move forward / backward

Press lever and adjust seat either forward or backward. Release lever to lock in position.

Allows you to adjust the depth of the seat, for good support and blood circulation in the legs.

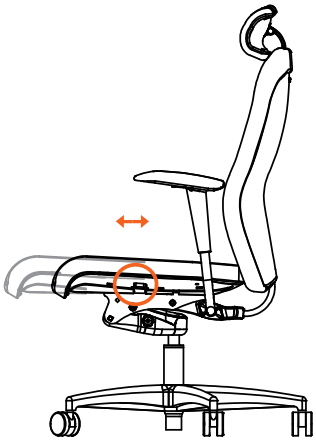


03

Tilt Tension

Right side under the seat

To increase:
Turn knob clockwise.
To decrease:
Turn knob counterclockwise.

Set the resistance when leaning back to support and balance your weight in any position.

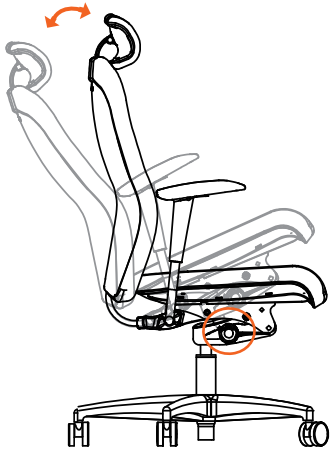


04

Tilt Limiter

Lever under left side of seat

To engage / disengage:
Choose 4 desired angle position before reclining by twisting the knob.

Allows you to choose your tilting angle.

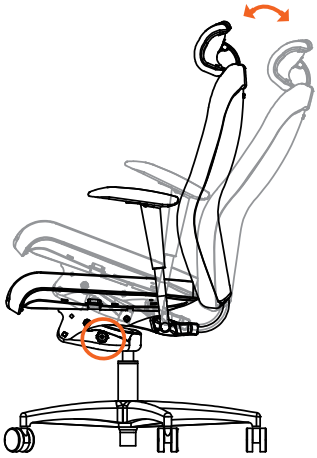


05

Armrest Adjustment

Lever under armrest pad


To raise or lower:
Press lever to unlock arm,
adjust arm, release lever to lock.

Adjust chair's arm height to support your arms and take weight off your shoulders.

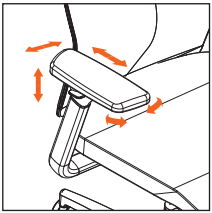


Saya Soul Armrest

- Armrest up-or-down, forward-backward, sideway adjustment and angle adjustment

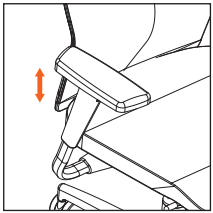

Presa Soul Armrest

- Armrest up-or-down adjustment

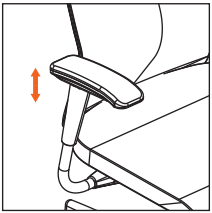

Saya Armrest

- Armrest up-or-down adjustment

06

Backrest Height Adjustment

Bottom corners of backrest


To raise:

Grasp and lift up the bottom portion of the backrest and release to desired height.

To lower:

Grasp and lift up the backrest to its maximum height and release back to its lowest postition.

Allows you to adjust the height of the backrest, for good support and blood circulation of the back.

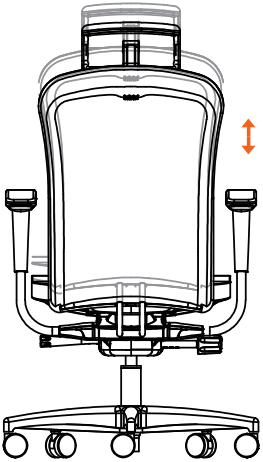


07

Headrest Height Adjustment

Rear of the headrest

To raise or lower headrest:
Grasp the rear of headrest and slide it up or down to desired height.

Adjust headrest's height to support your head and neck when leaning back.

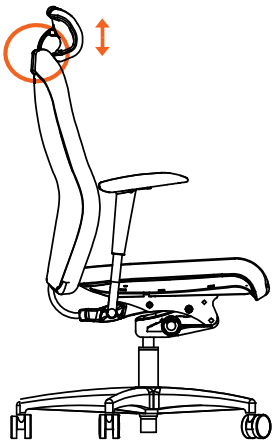

08


Headrest Angle Adjustment

Side edges of headrest

To pivot headrest:

Grasp side edges of headrest and pivot the angle to desired position.

Adjust headrest's angle to support your head and neck when leaning back.

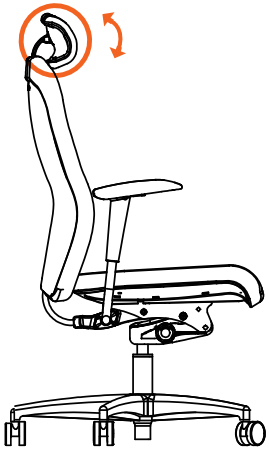

Dos & Don'ts

Do ✔

- For sitting.
- To be placed on even surface.
- Inspect the product before first use and once every 6 months.
- Children under 6 should use the chair only under supervision.
- Always adjust chair before sitting
- Sit in correct position on chair
- Ensure chair is on proper surface

Don't ✖

- Do not stand, jump or play on the chair.
- Do not clean with unrecommended cleaners.
- Do not use as trolley to cart objects.
- Do not sit on armrests.
- Do not place sharp objects on the chair.
- Stop using the product if there is a malfunction.
- Do not modify without supervision by qualified technicians.
- Keep away from flame.
- Do not place chairs in open air areas with direct sunlight, moist or dusty area.
- Do not place chairs with castors on slippery hand surface (eg. cement, tile) to avoid slipping.

Contact

Malaysia
Tel No: +603 8962 3233
Email: export@bristol.com.my (International only)
sales@bristol.com.my (Malaysia only)

Singapore
Tel No: +65 6438 2178
Email: sales@bristol.com.sg

India
Tel No: +91 96 8619 1391
Email: sales@bristolindia.com

Thailand
Tel No: +662 689 6380
Email: sales@bristol.co.th

Indonesia
Tel No: +62 21 2952 4141
Email: indonesia@bristol.com.my

Vietnam
Tel No: +84 79 641 9876
Email: vietnam@bristol.com.my

ISO 9001 CERTIFICATION Intertek ™ STANDARDS MALAYSIA MS ISO/IEC 17021:2011 QS 10062001 CB 02 UKAS MANAGEMENT SYSTEMS 014
Rgn No : Q112788C

ISO 14001 CERTIFICATION Intertek ™ UKAS MANAGEMENT SYSTEMS 014
Rgn No : E112788